

12 NATURAL COLOURS



MISTY GREEN



FIRE CLAY



TERRACOTTA



BUTTERSCOTCH




SMOKE ASH



MUSHROOM



WHEATFIELD

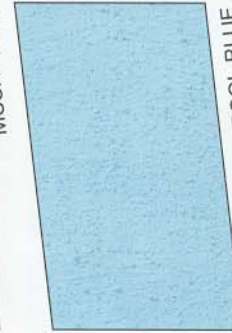

POOL BLUE



DOVE GREY



WHITE



COURT GREEN



CHARCOAL

Colour samples are as close as possible as printing processes allow.

FASHION
COLOURS
INSIDE

RUBBERISED
NON SLIP
PAINT

YOUR NEAREST TREDGRIP STOCKIST:



INDUSTRIES Pty. Ltd.

39 Ellen St. Wollongong NSW 2500, AUSTRALIA

Phone: +61 2 4227 3444 • 1300 763 444

Fax: +61 2 4226 2208 • ABN 98 002 454 462

spacepac@spacepac.com.au

DOMINION PLASTIC INDUSTRIES PTY LTD

McGILL STREET, SHEPPARTON. BOX 7358

SHEPPARTON 3632. TELEPHONE: (03) 5821 1477

A.C.N. 007 205 209

Cover photograph courtesy of Australian House & Garden
Photography by Russell Brooks.



envelon

TREDGRIP



PREPARATION

Before application all surfaces must be clean and free of dust, oil and grease. Adhesion largely depends on careful surface preparation. Try a small area first to satisfy yourself with the final result. All sharp edges should be bevelled.

Allow surface to dry and apply coating of Tredgrip. For old or weathered concrete, remove any trace of grease, oil or dirt, and when thoroughly clean, apply as directed. On very smooth or dusty surfaces we strongly advise the use of ENVELON EC25 Primer.



Actual sample - Wheatfield

PREVIOUSLY PAINTED SURFACES

Carefully remove any flaking or cracked paint and follow application directions. If the surface is sound, lightly sand, remove dust and apply as directed.

APPLICATION

Fill all surface defects such as holes, joints and cracks with caulking compound. Ensure expansion joints are correctly formed according to building codes. After thinning 20% with water, apply the first coat of Tredgrip with a long pile paint roller or paint brush. Allow to dry thoroughly for a minimum six hours or preferably overnight, depending on temperature conditions. (Do not apply below 15 degrees C). After first coat is completely dry apply a second or third coat of Tredgrip (depending on service required) at 5-6m² per litre per coat and allow to dry for minimum of 24 hours before subjecting to light traffic. (72 hours minimum for full cure).

METALS

Must be clean with all rust neutralised or removed. After preparation apply one coat of Metal Primer allowing adequate drying time before coating with Tredgrip.

TIMBER AND PLYWOOD

Sand smooth, and clean thoroughly. Apply one coat

Timber Primer allowing minimum 24 hours drying time before coating with Tredgrip.


CONCRETE SURFACES

Etch the surface with hydrochloric acid (Spirits of Salts) diluted 1 to 3 with water. Hose down and clean thoroughly.


TOUCH UP PROCEDURES


Thoroughly wash the area with a detergent solution, hose and allow to dry. When dry, simply overcoat with Tredgrip to restore the original appearance. Clean up with water.



 Tredgrip, the **easily applied** anti skid, rubberised textured paint for the areas you need positive traction.

 Tredgrip is **non abrasive** and remains permanently flexible and will cover hairline cracks.

 Tredgrip is **strong and tough** and has excellent weathering stability, easy to apply - clean up brushes and rollers in water.

 Tredgrip is **hardwearing**, decorative and ideal for renovating exterior decking, stairways, steps, walkways, around pools, factory/warehouse floors, boats etc.

 Available in **12 popular colours** in a matt finish. Suitable for interior or exterior areas.