


Replaces all previous versions

# POWERED CAGEMATE

*Powered CAGEMATE battery driven trolley, with universal built in charger and lift off cage sides.*

**Capacity: 450kg**

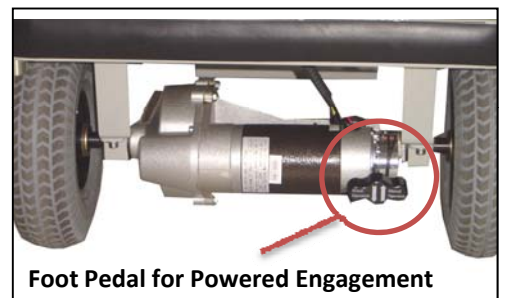

Foot Pedal for Powered Engagement

**NOW Two Models!**

**12 Month Warranty**

## SPECIFICATIONS

Model	# CAGEMATE1160
Description	Powered trolley complete with lift off cage sides
Dimensions	Deck size – 1100 xx 630mm Cage depth – 600mm Handle height – 1100mm
Wheels	Front drive wheels – 250mm semi pneumatic Rear steer wheels – 125mm urethane
Batteries	12V 40AH x 2
Charger	External - Input range 110-240 V
Capacity	450kg
Unit weight	110kg
Features	Dead man switch , Forward & reverse beeper, Manual or powered engagement , Folding Handle
Shipping Size (mm)	Flat Pack : 1350L x 650W x 800H (inc. Skid)_ 110 kg
<b>Please email to <a href="mailto:spacepac@spacepac.com.au">spacepac@spacepac.com.au</a> for current pricing</b>	

**Also See our Powered Trolleys :**



**Pushmate**

**Liftmate**

Freight Additional - Normally Ships with handle and sides flat packed to reduce shipping cost

**All prices/specifications subject to change without notice.**

# Quick User Guide

## POWERED CAGEMATE

### **LOAD CAPACITY** – 450kg

Evenly distributed loads as recommended

**DO NOT OVERLOAD** or obstruct operator view with high loads.



### **POWER – ON/OFF SWITCH**


Turn key switch to on position for normal operation.

If powered status light flashes there may be a fault, please contact your supplier.



### **EMERGENCY STOP**

Stops the unit when reversing.

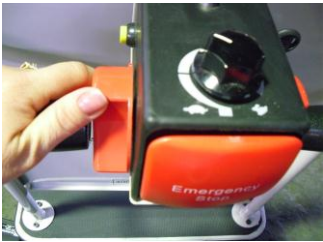

### **PADDLE LEVER**

Push lever forward for forward motion.

Push lever down for reverse motion.

(Buzzer should sound in reverse)

**FORWARD MOTION IS ALWAYS RECOMMENDED!**



### **SPEED CONTROLLER**

Adjust speed for load and the speed required –

**WALKING PACE IS RECOMMENDED!**



*Please ensure you are familiar with the manual and the correct operating instructions.*

*If in doubt contact supplier before use.*

# Quick User Guide

## POWERED CAGEMATE



### **ELECTRONIC BRAKE RELEASE**

Push to disable drive motor when power is on.



### **FREE WHEEL LEVER**

Push to disable brake motor to enable free wheel if batteries are flat.

This enables trolley to be used normally with no power drive engaged.

**ALWAYS** do this on a level surface.



### **BATTERY INDICATOR**

When low connect to charger as soon as possible



### **CHARGING**

Unit has an external charger which is located in a compartment underneath the deck at the end of the controls.

Charging point is located on the left hand side of the handle.



Plug lead into female position and then into powerpoint – charge with keyswitch in OFF POSITION.

**OVERNIGHT CHARGE IS RECOMMENDED**



*Please ensure you are familiar with the manual and the correct operating instructions.*

*If in doubt contact supplier before use.*